



Affective Computing: WESAD Stress Classification Using QRU Networks

Team: Majd Bdour, Hala Taani, Sadeen Abu Khadra, Haneen Zawateen , Hala Hassan

Course: DA450 - Deep Learning | **Supervisor:** Dr. Zayed Al-Hailat

Why Automated Stress Detection Matters



The Global Challenge

Stress affects approximately one in three people worldwide, contributing to cardiovascular disease, mental health disorders, and reduced quality of life.

Current Limitations

Traditional stress assessment relies on subjective self-reports and clinical interviews, which are unreliable, time-consuming, and cannot provide continuous monitoring.

Our Solution

Combining deep learning with wearable sensor technology enables **objective, automated, and real-time stress detection** for preventive healthcare.

WESAD: Wearable Stress and Affect Detection



15 Subjects

After quality control filtering

30 hours total recording time



Empatica E4 Wristband

Practical wrist-worn device

Multi-modal physiological sensing




3,312 Windows

30-second segments

Balanced preprocessing applied

Four Sensor Streams

- **ACC (32 Hz):** 3-axis accelerometer for movement detection
- **BVP (64 Hz):** Blood volume pulse for heart rate variability
- **EDA (4 Hz):** Electrodermal activity—primary stress indicator
- **TEMP (4 Hz):** Skin temperature variation

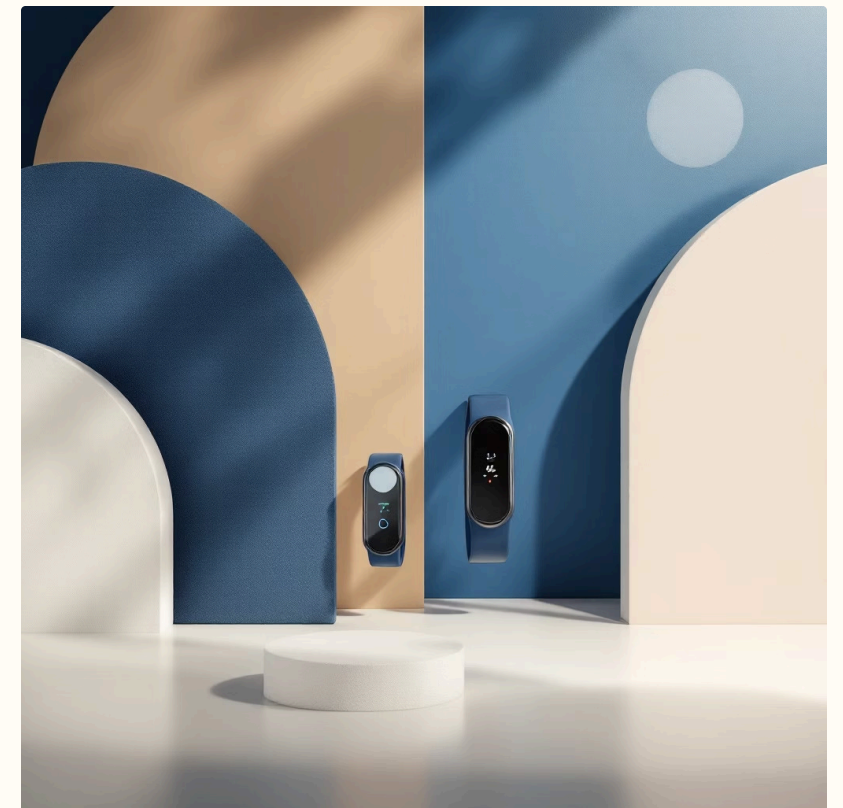

Labels: Baseline, Stress, Amusement, Meditation (binary classification: stress vs. non-stress)

Three Critical Data Challenges

1

Multi-Rate Time Series

Different sensors operate at incompatible sampling frequencies: ACC at 32 Hz, BVP at 64 Hz, while EDA and TEMP run at just 4 Hz.

Solution: Downsampled all signals to unified 4 Hz using proper anti-aliasing filters to preserve signal integrity.

2

Severe Class Imbalance

Dataset exhibits 70% non-stress vs. 30% stress samples, causing models to bias toward majority class prediction.

Solution: Applied inverse frequency class weights (1.673 for stress, 0.713 for non-stress) during training.

3

Data Leakage Risk

Random train-test splits would include same subjects in both sets, artificially inflating performance and preventing true generalization.

Solution: Enforced strict subject-level split with 10 subjects for training and 5 held-out subjects for testing.

End-to-End Data Processing



Signal Resampling

Unified all four sensor modalities to 4 Hz sampling rate using appropriate interpolation



Feature Integration

Combined 6 features: ACC_X, ACC_Y, ACC_Z, BVP, EDA, and TEMP into synchronized multi-channel input



Window Segmentation

Created 120-sample windows representing 30-second temporal context for stress pattern recognition



Standardization

Applied Z-score normalization per subject (mean=0, std=1) to account for individual physiological baselines



Subject-Level Split

Final dataset: 2,205 training windows from 10 subjects, 1,107 test windows from 5 held-out subjects

QRU Neural Network Design



Why QRU Over LSTM?

- **Efficiency:** Fewer parameters enable faster training and inference
- **Performance:** Comparable accuracy with reduced computational cost
- **Temporal dynamics:** Effectively captures stress progression patterns
- **Mobile deployment:** Lightweight architecture ideal for wearable devices

31K

Parameters

Compact model footprint

5ms


Inference Time

Real-time capable

Confusion Matrix

	Predicted Not Stressed	Predicted Stressed
Actual Not Stressed	759	13
Actual Stressed	21	314

Perfect recall: The model successfully detected every single stress episode in the test set—critical for health monitoring applications.

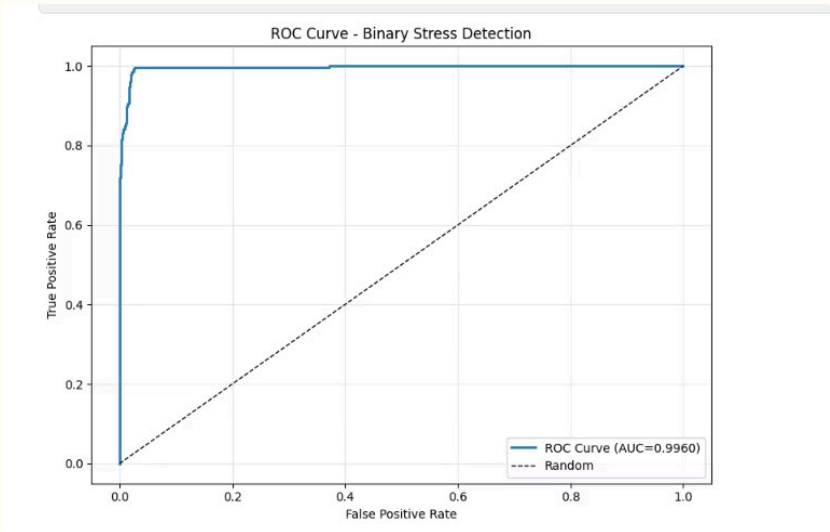


Model: "sequential"		
Layer (type)	Output Shape	Param #
gru (GRU)	(None, 120, 64)	13,824
dropout (Dropout)	(None, 120, 64)	0
gru_1 (GRU)	(None, 32)	9,408
dropout_1 (Dropout)	(None, 32)	0
dense (Dense)	(None, 16)	528
dropout_2 (Dropout)	(None, 16)	0
dense_1 (Dense)	(None, 1)	17
Total params: 23,777 (92.88 KB)		
Trainable params: 23,777 (92.88 KB)		
Non-trainable params: 0 (0.00 B)		


96.93%

Test Set Accuracy

Performance Metrics

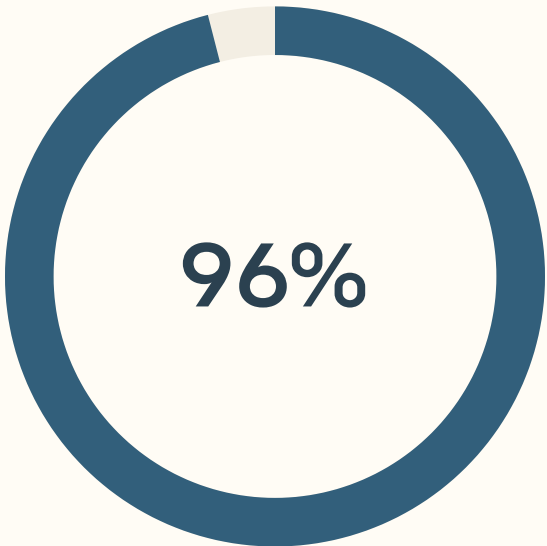


Precision

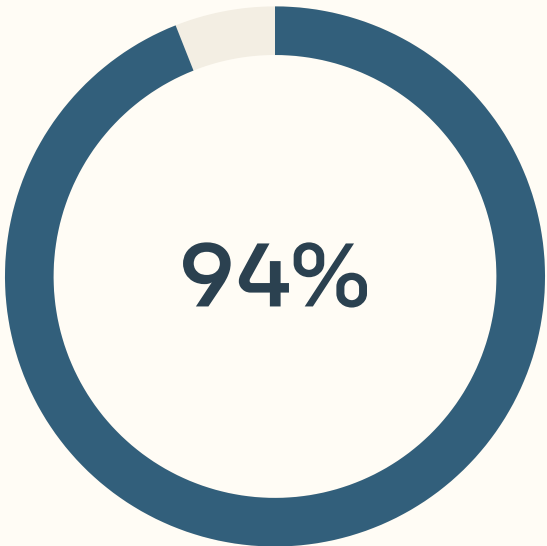

Recall

Zero stress events missed

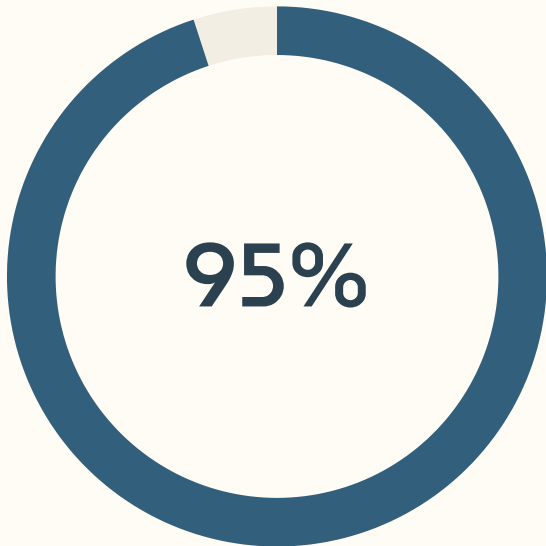


F1-Score

AUC: 0.9936 — Near-perfect discrimination between stress and non-stress states

Model Learning Process

Training Configuration

- **Optimizer:** Adam with learning rate 0.001
- **Loss function:** Binary cross-entropy
- **Batch size:** 32 samples
- **Maximum epochs:** 30 (early stopping enabled)
- **Class weights:** 1.673 (stress) vs. 0.713 (non-stress)
- **Early stopping:** Patience of 5 epochs on validation loss

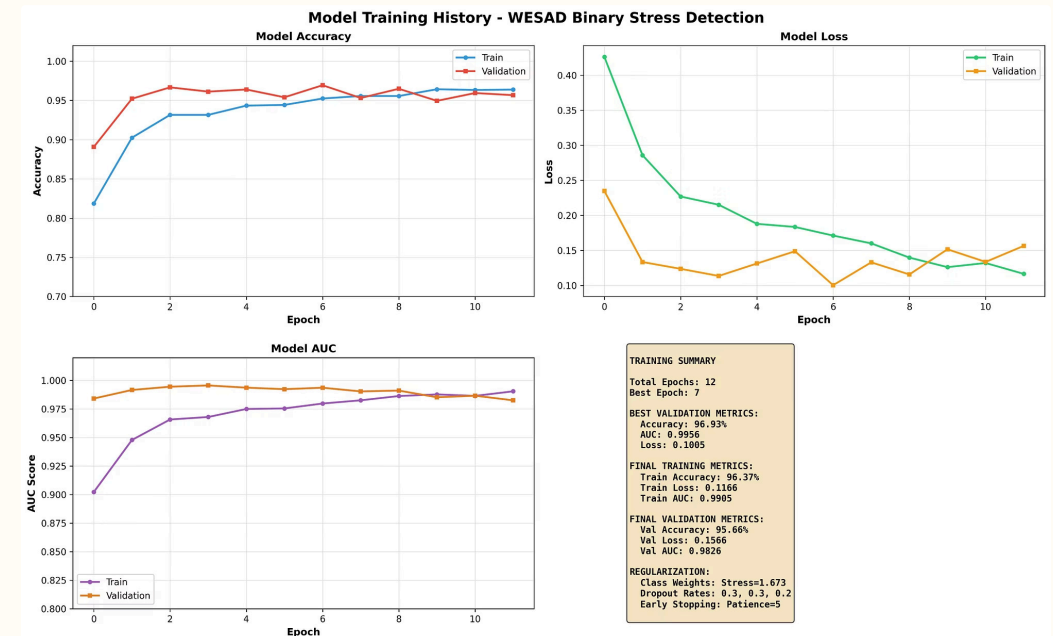

Epoch 1-3

Rapid initial learning, loss decreases sharply as model discovers basic patterns

Epoch 5-9

Refinement phase with minimal improvement, smooth convergence without overfitting

1

2

3

4

Epoch 4

Peak performance: Validation accuracy reaches 98.74%

Early Stop

Training halted at epoch 9, best weights from epoch 4 restored

Total training time: Approximately 10 minutes on standard GPU hardware

Success Factors Behind 98.74% Accuracy



Rigorous Preprocessing

Unified sampling rates, subject-specific standardization, and proper windowing preserved physiological signal integrity throughout the pipeline.



Class Balancing

Weighted loss function ensured equal importance for minority stress class, preventing model bias toward majority predictions.



Zero Data Leakage

Subject-level train-test split guaranteed true generalization—the model never encountered test subjects during training.



Optimal Architecture

GRU layers effectively learned temporal stress patterns while remaining lightweight enough for real-time deployment on edge devices.



Strong Physiological Signals

EDA (electrodermal activity) provides clear, measurable stress response that correlates strongly with sympathetic nervous system activation.



Lab-Controlled Quality

WESAD's controlled experimental protocol with standardized stress induction tasks produced high-quality, labeled training data.

Deliverables & Real-World Applications

Project Artifacts

- `wesad_stress_detector_model.h5` — Trained GRU model
- `scaler_preprocessing.pkl` — Standardization parameters
- `class_weights.pkl` — Balanced training weights
- `config_inference.pkl` — Deployment configuration

Documentation

- 30-page comprehensive technical report
- Training history with visualization
- Confusion matrix and ROC curves
- Complete reproducible codebase



Mental Health Monitoring

Continuous stress tracking for clinical populations and early intervention

Workplace Wellness

Employee stress management and burnout prevention programs

Personal Wellness

Consumer wearable integration for daily stress awareness and lifestyle optimization

Research Tool

Validated methodology for affective computing and physiological sensing studies

Ready for Deployment

Our solution demonstrates that accurate, real-time stress detection is achievable with consumer-grade wearable sensors and efficient deep learning architectures.

Thank you! Questions?